



# Luxury Backlit Metal Letters Diagram

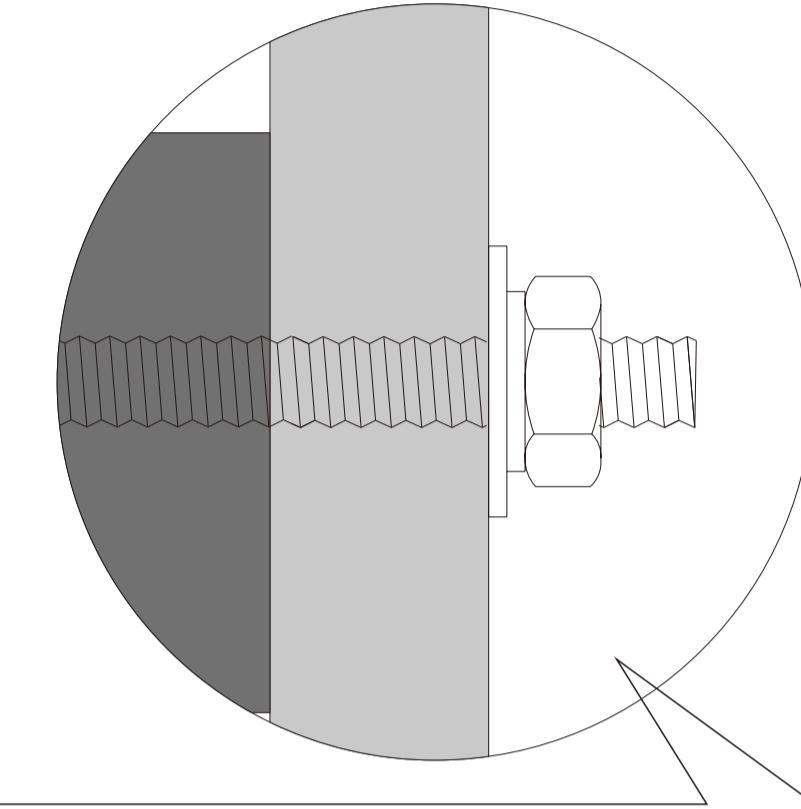

If the backing wall is thin and construction can be performed on the another side of the back wall, please use nuts and washers to fix the stud bolts on the back wall, so that the signage can fix on the backing wall more secure.

The AC transformer emits heat during work. We recommend that the AC transformer be placed in a ventilated position or in a power distribution box with air vents to facilitate heat dissipation and increase the service life of the AC transformer.

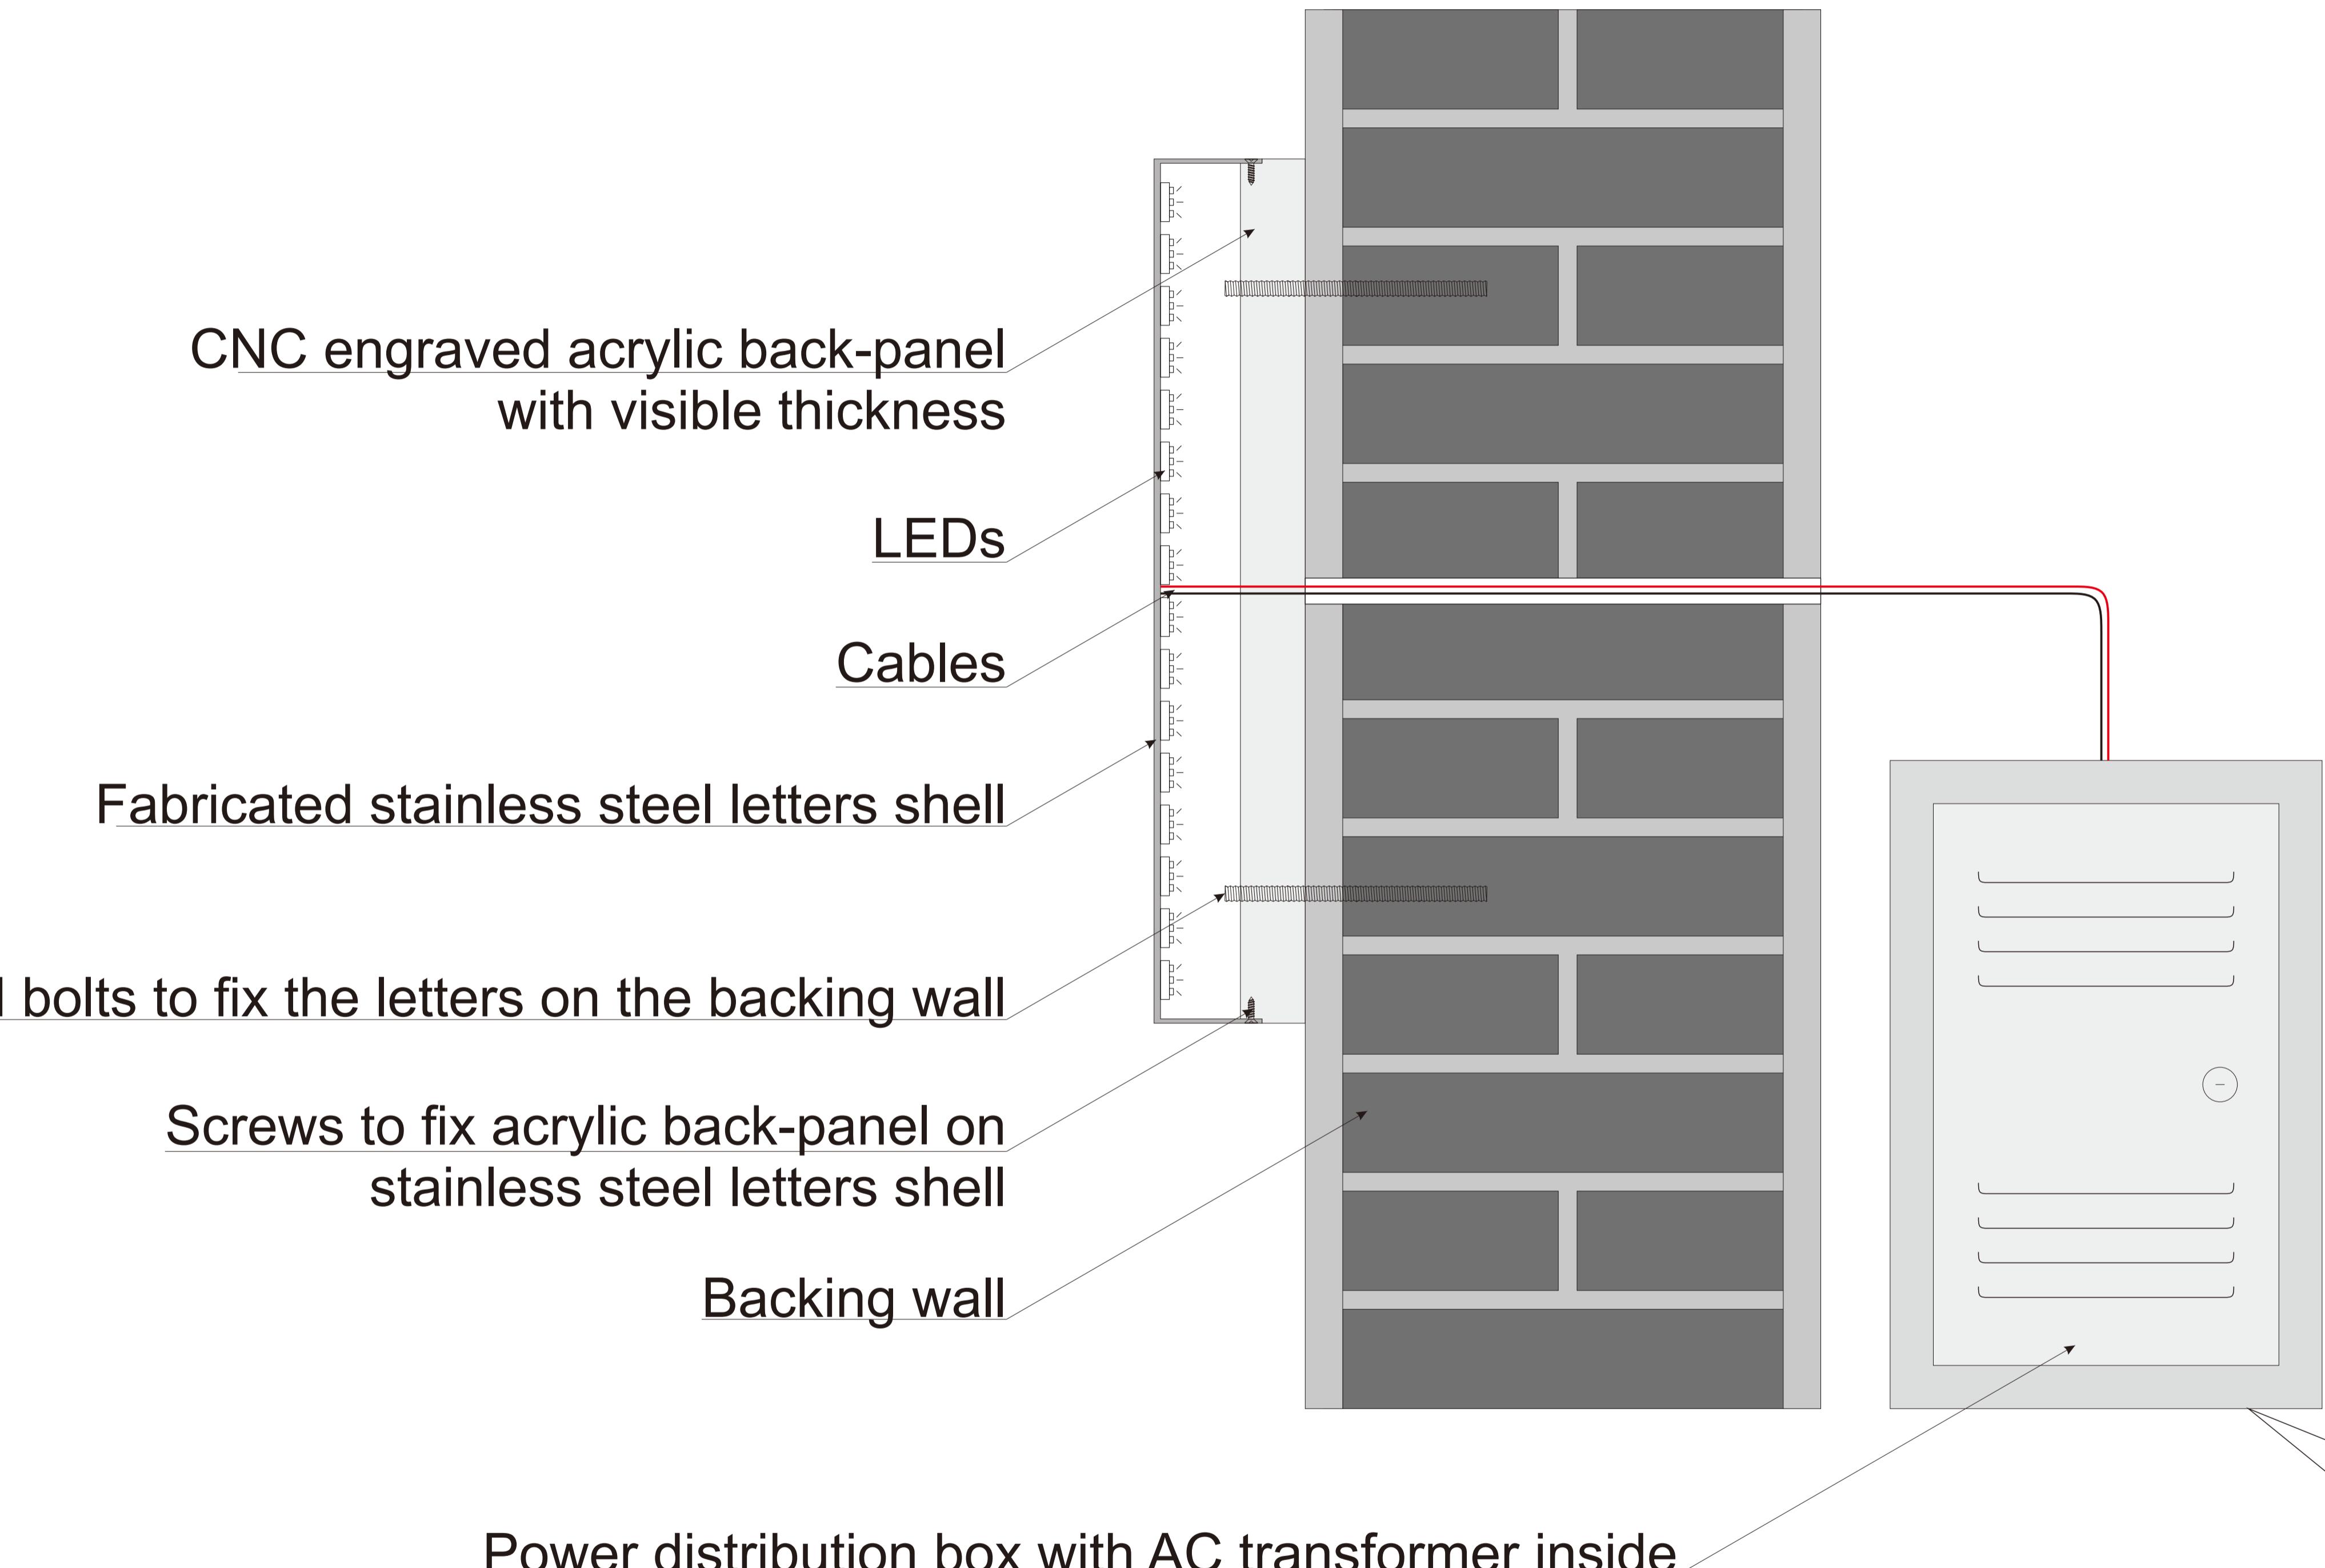